

WidePix POE v2 Quick Start Guide

Online version: https://wiki.advacam.cz/wiki/WidePix_POE_v2_Quick_Start_Guide

Contents


Prerequisites	3
Description of LED indicators	3
Network settings	4
<i>IP mode change</i>	4
<i>IP address change</i>	5



Prerequisites

- Connect power cable (not needed when using POE)
- Connect ethernet cable
- PC with Pixet
- At least 1Gbit/s ethernet is required
- Magnet

Description of LED indicators

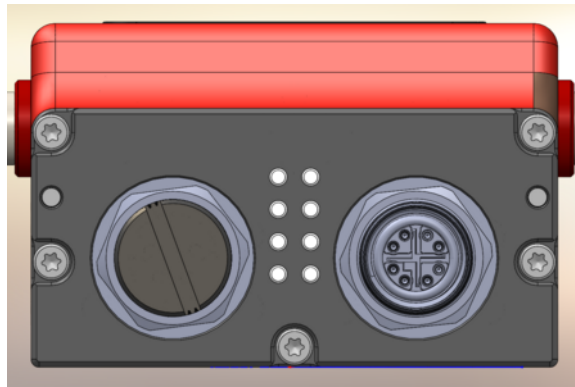

4 LEDs Left side

L1. Device status

- **Green** blinking 2s - device ready, OK
- **Orange** still - just init (about 1s)
- **Red** blinking - overtemperature ($> 55^{\circ}\text{C}$) warning
- **Red** still - fatal error, power cycle the device. If this LED is still red, contact Advacam technical support.

L2. Error code LED

- **Green** blinking according to the error (it does not prevent functionality of the device)
- In this case, Technical Support will ask the customer to make 10s video

L3. Reserved for internal purpose

- **Violet** still - the device restarted itself (it is not a problem at the device starting, but if this occurs during measurement, it will probably stop working)

L4. Power supply for the row segment

- **Orange** still - power on (when pixet is running)
- The LED stays on even when Pixet crashes!

4 LEDs Right side

R1. FPGA

- **Orange** still - shutter is open
- **Orange** changes to **Red** during init
- It is used also during IP reset procedure (described below)

R2. Device power

- **Blue** still - power on
- **Blue** blinks shortly during init
- **Blue** still and **green** blinking (result is **blue-turquoise**) - communication with Pixet during FW revert procedure (described below)

R3+R4. Eth link (R3 green, R4 red)

- None - no connection
- Only **green** blinking - 1 Gbit/s, ok
- Only **red** blinking - lower speed
- Both **red** and **green** blinking - lower speed
- Both **red** and **green** blinking shortly during init
- Both **red** and **green** still - connected to switch, but without access to network

Network settings

IPv4 supported modes

Auto-IP (random 169.254. ...)

DHCP (required DHCP server running on router/computer)

Static IP (default is 192.168.1.100)

IPv6

(currently not supported)

IP mode change



Video of IP settings change / reset

Warning: Static IP address of the device is reset to the default factory value 192.168.1.100 when this procedure is started!

- Disconnect the device from any network if connected. Connect the device to power.
- After the device init (R1 is **Orange**, changes to **Red** and turns off), attach the magnet to magnetic sensor. When the magnetic field is recognized, R1 turns **Blue**. If R1 starts blinking **Blue**, you have missed the IP mode change time window (~5 s after power up) and need to start the process over.
- When the change mode is enabled, R1 changes to one of the colors indicating the actual settings (listed below).
- Use magnet for select the preferred settings. There are 3 possibilities of the R1 color for different IP configurations:
 - **Red** = Auto IP

- **Green** = DHCP
- **Yellow** = Static IP (set default 192.168.1.100)
- Wait for several seconds. R1 blinks several times and turns off. Now the setting is saved.
- Connect the device to the specified network.

IP address change

(see the Gigex IP address change in the Widepix manual)